


Spacer drilling templates for dual xrf-286 amplifier (v7.1)

Align the input board
spacer under this
template. Drill 3
clearance holes (.125)
for 4-40 screws through
the spacer where
indicated

Align the output board
spacer under this
template. Drill 3
clearance holes (.125)
for 4-40 screws through
the spacer where
indicated

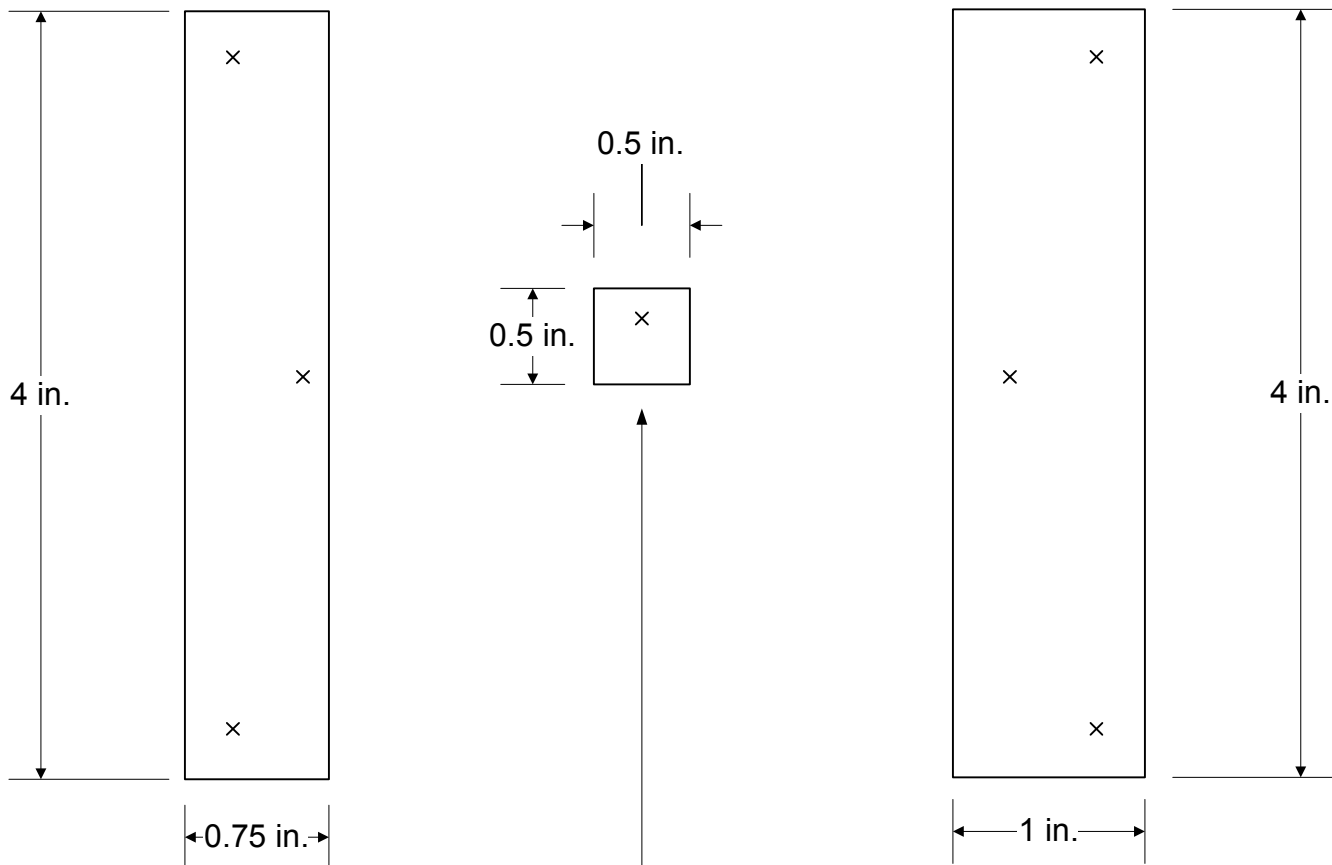

Align the termination spacer
under this template. Drill 1
clearance hole (.125) for a 4-40
screw through the spacer where
indicated